


# Top Panel 2400 mm Mounting Guide

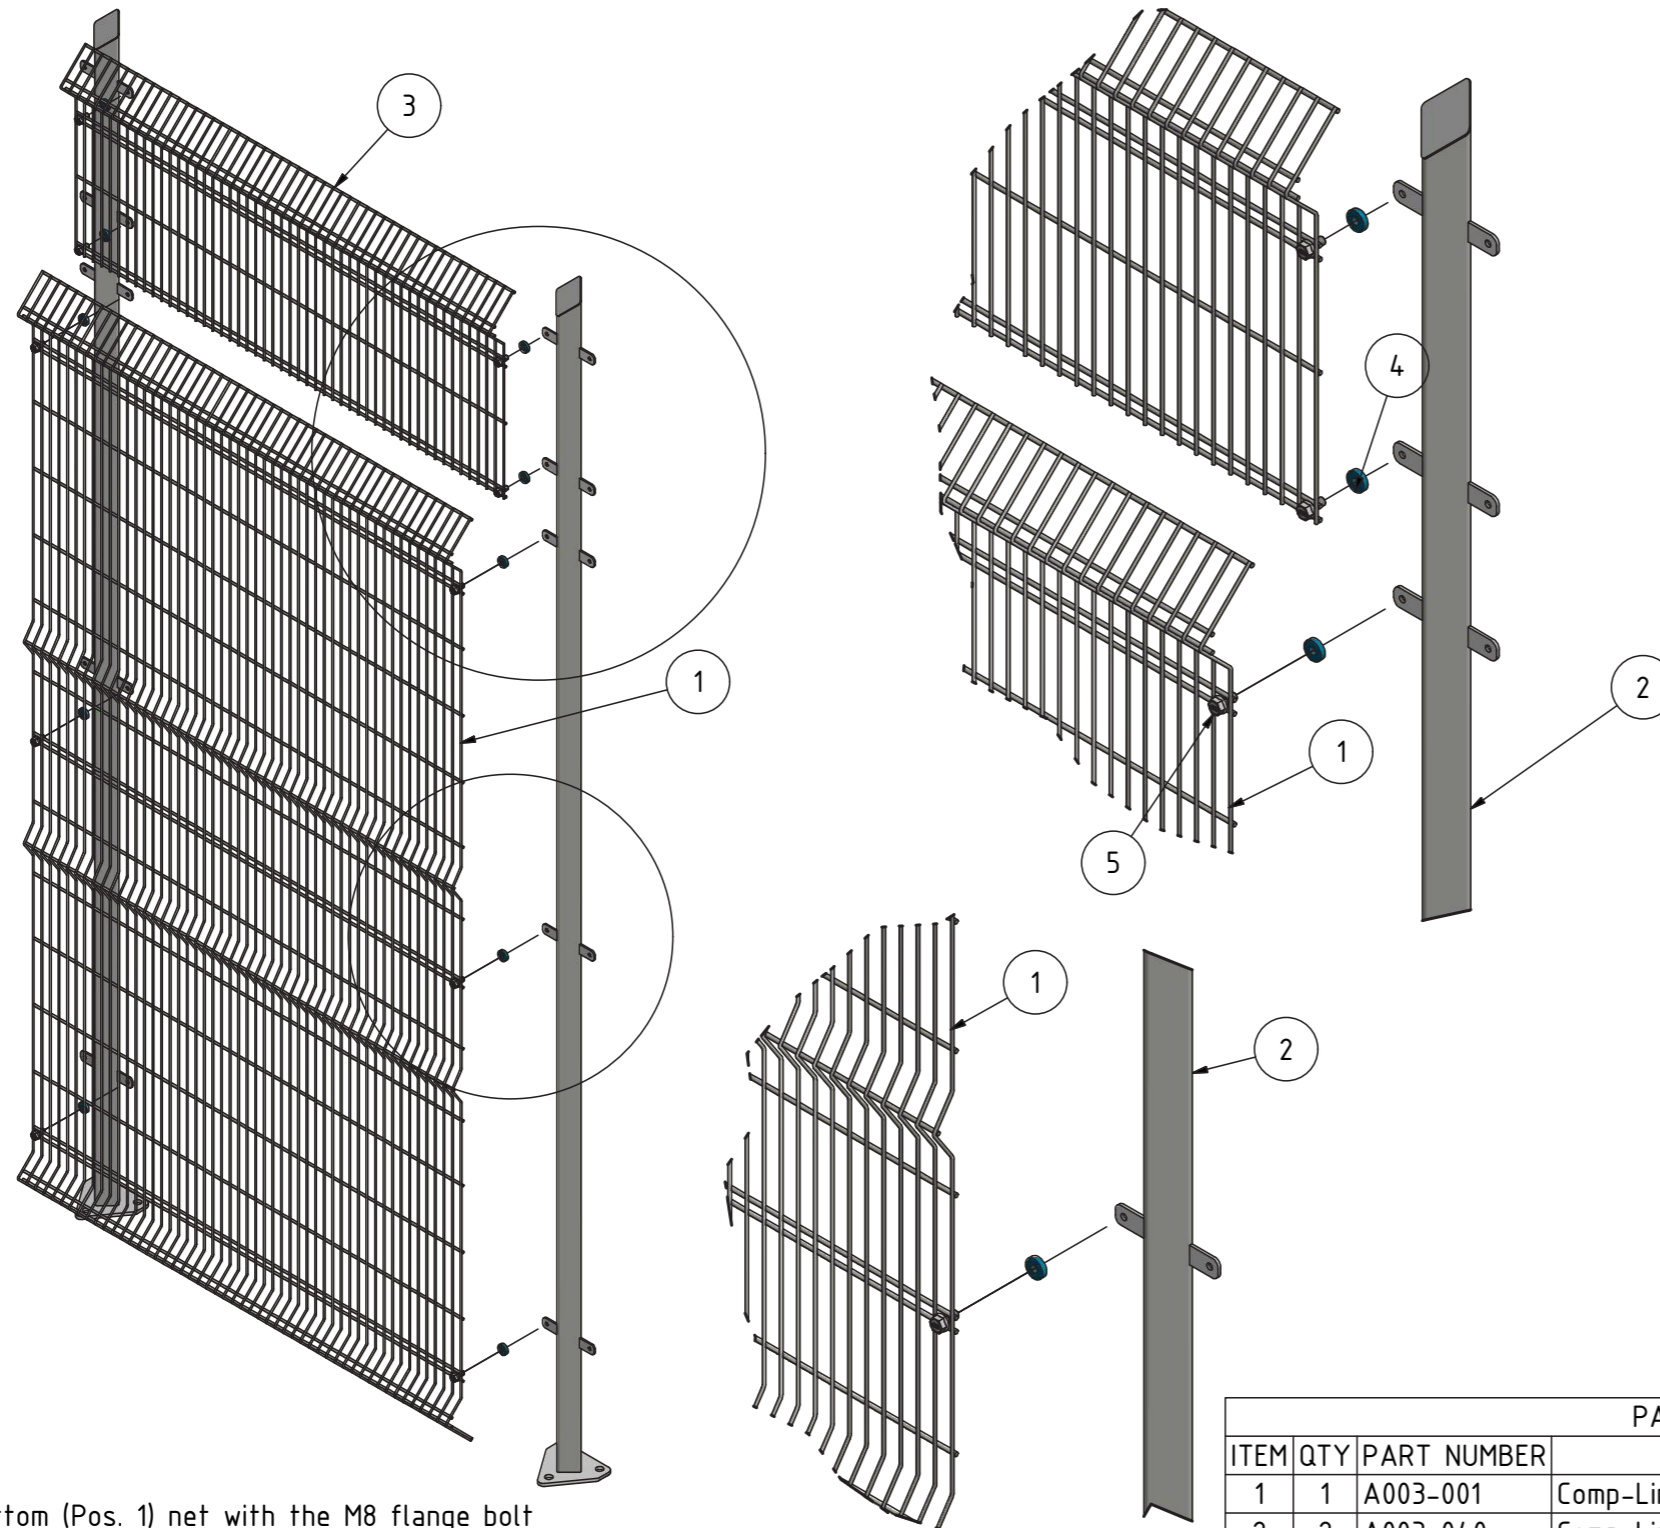

## Instructions

1. Mount the bottom (Pos. 1) net with the M8 flange bolt and M8 Spacer (Pos. 4 & 5)
2. Mount the top-net (Pos. 3) with the M8 flange bolt and M8 Spacer (Pos. 4 & 5)

PARTS LIST				
ITEM	QTY	PART NUMBER	DESCRIPTION	
1	1	A003-001	Comp-Line 2000 - 2000mm Panel	
2	2	A003-040	Comp-Line 2400 - Post, 2-Way Bracket System	
3	1	A003-030	Comp-Line 2400 - 2000mm Top Panel	
4	10	M001-291	M8 Spacer	
5	10	M001-665	Special NTF Flangebolt M8x16	